


USER GUIDE

BLOCK GRAB FORKLIFT ADAPTOR

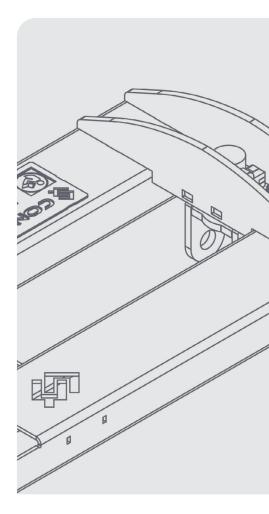



 
DISCLAIMER

Do not attempt to handle or operate this equipment before you have received sufficient training. Before use, operatives must have carried out all checks featured on the Visual Inspection Sheet on page 11. It is imperative that you have read the General Safety Instructions on page 12 and sufficiently familiarised yourself with the Operational Procedures in this document.

Note that this item is compliant only to the standards specified in this User Guide and it is therefore the duty of the responsible person(s) to review and ensure compliance.

CONTENTS

PRODUCT INFORMATION INTRODUCTION 05 SPECIFICATION 06 PARTS DIAGRAM 07 **OPERATIONAL PROCEDURES** IMPORTANT USAGE NOTES 08 USING WITH A FORKLIFT OR TELEHANDLER 08 **MAINTENANCE & INSPECTION** MAINTENANCE REGIME 10 VISUAL INSPECTION SHEET 11 **GENERAL SAFETY INSTRUCTIONS** SAFETY INSTRUCTIONS 12 **GENERAL NOTES** 13 LEGAL TERMS AND CONDITIONS 14 EC DECLARATION OF CONFORMITY 18 STANDARDS AND REGULATIONS APPLICABLE 19



INTRODUCTION

OVERVIEW

The Conquip Block Grab Forklift Adaptor is a quick and easy method of adapting a Conquip Block Grab to be used with a forklift or telehandler to lift blocks and bricks.

The design reduces the swing of the Block Grab, improving safety when transporting palletised material around site. Safety restraint pins sit behind the heels of the forks, keeping the attachment safely secured and preventing any chance of it sliding off the forks.

KEY BENEFITS


- Ideal for moving palletised blocks and bricks short distances around site.
- Reduces swing on the Block Grab.
- Easy to fit to a forklift using safety restraint pins.





SPECIFICATION

| ITEM | PRODUCT CODE |
|-----------------------------|---------------|
| Block Grab Forklift Adaptor | FA105AA-02000 |

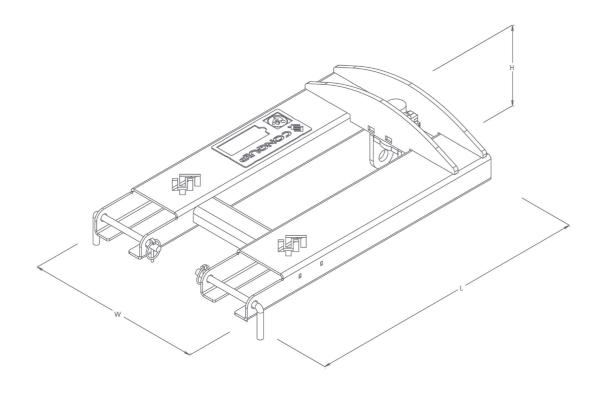


| LENGTH (mm) | WIDTH (mm) | HEIGHT (mm) | WEIGHT (kg) | WLL* (kg) |
|----------------|------------|-------------|-------------|------------------|
| 840 | 525 | 250 | 40 | 2000 |

*Working Load Limit

PARTS DIAGRAM

\$CONGUI>

BLOCK GRAB FORKLIFT ADAPTOR

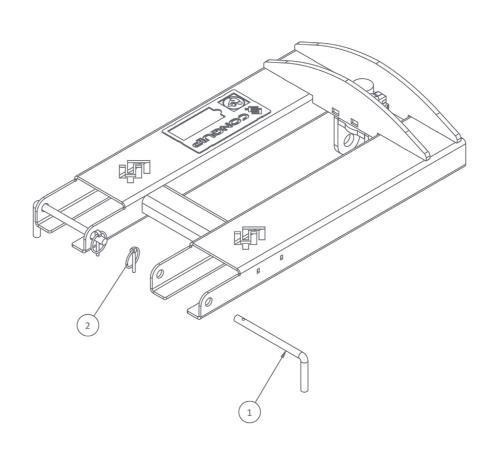

| ITEM NUMBER | PART | DESCRIPTION | QUANTITY |
|-------------|----------|-------------|----------|
| 1 | ZZ990000 | Heel Pin | 2 |
| 2 | ZZ990009 | Linch Pin | 2 |

NOTE: These parts are for this model, they may differ for previous versions. Please contact Conquip with any queries.


OPERATIONAL PROCEDURES

IMPORTANT USAGE NOTES

- The Block Grab Forklift Adaptor is supplied with two heel pins, one for each fork pocket. These must both be fitted correctly before use. If one or more are damaged, incomplete or missing do not use the equipment and do not use alternatives contact Conquip for a replacement.
- This equipment is designed to lift the load clear of the ground. Do not drag the load.
- The Block Grab Forklift Adaptor should arrive on-site with a Block Grab already attached. If they have been delivered to site separately, do not attempt to fit the Block Grab to the Block Grab Forklift Adaptor as a thorough examination by a qualified, competent person needs to be carried out prior to use.

USING WITH A FORKLIFT OR TELEHANDLER

- 01. To attach the Block Grab Forklift Adaptor to a forklift or telehandler, first remove the linch pins to release the heel pins.
- 02. Set the machine's forks to the correct width for the Block Grab Forklift Adaptor fork pockets. Make sure that they are equidistant from the centre.
- 03. Drive the forklift or telehandler to the Block Grab Forklift Adaptor, aligning the forks with the fork pockets.
- 04. Move the machine forward until the forks are fully inserted into the fork pockets.
- 05. Apply the park brake and switch off the machine's engine.
- 06. Insert the heel pins, ensuring they pass behind the heel of the forks, and use the linch pins to lock the heel pins in place.
- 07. The Block Grab Forklift
 Adaptor and Block Grab are
 now ready for use.
- 08. Carefully transport the Block Grab to the blocks or bricks that are to be lifted.
- 09. Refer to the Conquip Block
 Grab User Guide to adjust and
 use the Block Grab correctly.

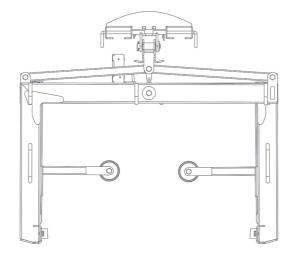

- 10. Once the Block Grab Forklift Adaptor and Block Grab are no longer required and free of any load, lower the Block Grab to the ground.
- 11. Remove the heel pins and linch pins from the Block Grab Forklift Adaptor.
- 12. Reverse the machine to remove the forks from the fork pockets.
- 13. Refit the heel pins and linch pins for storage.

SCONQUIP

MAINTENANCE & INSPECTION


MAINTENANCE REGIME

- It is mandatory that the equipment is thoroughly examined regularly, by a qualified engineer, to ensure compliance with relevant regulations. Conquip recommend carrying out a thorough examination every six months.
- This equipment may incorporate various loose and detachable items including, but not limited to pins, bolt assemblies and adaption plates. Refer to the separate requirements for the safe use of those items.
- When not being used, store the unit in a clean, upright condition and in a safe place where it will be protected from thieves and unauthorised users.
- This equipment must be inspected by the responsible person before each use and then regularly, as determined by your risk assessment or working practice. If you have any concerns about the machinery's condition or suitability, do not use it.

VISUAL INSPECTION CHECKLIST

| INSPECTION ITEMS | RESULTS | | COMMENTS | |
|---------------------------------------|--------------|----------------|------------------|--|
| | SATISFACTORY | UNSATISFACTORY | | |
| Serial Number | | | CQ | |
| Product Code | | | | |
| Working Load Limit (kg) | | | | |
| Conforms to user guide specification | | | | |
| Heel pins for damage | | | | |
| Heel pin retaining clips in place | | | | |
| Pivot area free from damage / wear | | | | |
| Lift pin secured | | | | |
| General visual inspection of the body | | | | |
| SIGNATURE | | | | |
| Name | Position | Qualification | Signature & Date | |
| | | | | |

 ©CONQUIP



GENERAL SAFETY INSTRUCTIONS

The equipment should be properly operated and maintained to keep it in a safe, efficient operating condition. Be sure that all fixings and components are free of mud or other matter that might cause issues hazardous to the operator, service personnel and other personnel or equipment. Report all malfunctions to those responsible for maintenance, and do not operate the equipment until corrected. Normal service or maintenance performed as required can prevent unexpected and unnecessary downtime.

This operations manual describes general inspections, servicing and operation with the normal safety precautions required for normal servicing and operating conditions. It is not a guide, however, for abnormal conditions or situations. Service personnel and operators must be safety conscious and alert to recognise potential servicing or operating safety hazards at all times, and take necessary precautions to assure safe servicing and operation of the equipment.



M002 Refer to instructions manual



M010
Wear protective clothing



M004 Wear eye protection



M008 Wear safety footwear



©CONQUIP

M009 Wear protective gloves



M014 Wear head protection



M015
Wear high-visibility
clothing

GENERAL NOTES

• Read this operations manual and learn the operating characteristics and limitations of the equipment. Know what operating clearances the machine requires.

GENERAL SAFETY INSTRUCTIONS

- Read and understand all the safety signs prior to operation.
- If the safety signs are obstructed by dirt or debris, clean them using mild soap and water prior to operation.
- If the safety signs are damaged or illegible, replace them immediately, prior to operation.
- Be aware of operating hazards that weather changes can create on the job. Know proper procedures to follow when a severe rain or electrical storm strikes.
- Never attempt to operate or work on machinery when not feeling physically fit.
- Never wear loose clothing, rings, watches, heavy gloves etc., that might catch and result in injury.
- Know what safety equipment (PPE) is required and use it. Such equipment may be: hard hat, safety glasses, reflector type vests, protective gloves and safety footwear.



TERMS & CONDITIONS

CONQUIP ENGINEERING GROUP STANDARD PRODUCT WARRANTY

01. COMMENCEMENT

- 1.1 This Warranty shall commence on the Commencement Date and shall continue until the earlier of:
- (a) the Expiry Date; or
- (b) the date on which it may be voided in accordance with clause 4.1(b) when it shall terminate automatically without notice.

02. DUTY OF GOOD FAITH

2.1 The Purchaser shall in the exercise of its rights under this Warranty and in the compliance with its obligations under this Warranty be subject to and shall in all respects owe and comply with a duty of good faith to the Warrantor.

03. NATURE AND EXTENT OF COVER

- 3.1 Subject to clause 3.2 the Warrantor agrees and undertakes to the Purchaser that it shall be liable to the Purchaser under and in accordance with the terms of this Warranty in the event that:
- (a) prior to the Expiry Date the Purchaser shall notify a Warranty Claim to the Warrantor; and
- (b) the Equipment or any relevant part of the Equipment shall have become unusable as the result of defective material or defective workmanship prior to the Expiry Date.
- 3.2 The Warrantor's obligation under clause 3.1 shall be expressly subject to the provisions of clauses 4, 5 and 6 and conditional upon the Purchaser's compliance in full with the provisions of clause 7.

04. RESTRICTIONS

- 4.1 The following restrictions apply to this Warranty:
- (a) This Warranty is personal to the Purchaser and neither the legal benefit nor legal burden of this warranty may be assigned or novated or otherwise transferred by the Purchaser to any other party. Any purported assignment, novation or transfer shall not be binding upon the Warrantor.
- (b) This Warranty shall be void in the event that the Purchaser:



- (ii) has, during the period between the Commencement Date and the Expiry Date, exceeded the Purchaser's Usage Cycle Parameters; and/or
- (iii) has, during the period between the Commencement Date and the Expiry Date, exceeded the Purchaser's Use Parameters; and/or
- (iv) has carried out, or procured the carrying out by any third party of, any repair to the Equipment or any part of the Equipment which is not an Authorised Repair; and/or
- (v) has operated the Equipment after having replaced any part of the Equipment with a part which has not been supplied and fitted by the Warrantor; and/or
- (vi) has modified the Equipment in any way prior to use.

Maintenance and Servicing Requirements; and/or

05. EXCLUSIONS

©CONQUI⊃°

- 5.1 The following are excluded from the scope of this Warranty:
- (a) Loss of and/ or damage to the Equipment or any part of it resulting from any collision between the Equipment and any other fixed or stationary or mobile object whatsoever, irrespective of whether that collision was or was not caused by the Purchaser; and/or
- (b) Loss of and/or damage to any personal property and/or possessions or other equipment not forming part of the Equipment but which is present in or about the Equipment; and/or
- (c) loss and/or damage which is covered by any other insurance policy taken out and maintained by the Purchaser or in respect of which the Purchaser has a contractual obligation to do so; and/or
- (d) loss and/or damage to the equipment which is consistent with the use by the Purchaser of the Equipment:
- (i) in compliance with the Maintenance and Servicing Requirements; and
- (ii) in compliance with the Usage Cycle Parameters; and
- (iii) in compliance with the Use Parameters; and
- (iv) having only carried out Authorised Repairs to the Equipment; and
- (v) having all and any replacement parts fitted by the Warrantor; and
- (vi) in unmodified form.

LEGAL



06. LIMITATION OF LIABILITY

- 6.1 The Warrantor's liability to the Purchaser shall be limited as follows:
- (a) The Warrantor shall not in any circumstances be liable to the Purchaser for indirect and/or consequential and/or economic loss suffered and/or incurred as the case may be by the Purchaser; and
- (b) The Warrantor shall only be liable to the Purchaser for the reasonable and proper costs reasonably and properly incurred by the Purchaser directly in connection with the repair and/ or replacement (at the Warrantor's absolute discretion) of the Equipment or any part of the Equipment; and
- (c) The Warrantor's liability to the Purchaser shall notwithstanding any other provision of this Warranty, not in any circumstances exceed the Purchase Price of the Equipment.

07. WARRANTY CLAIMS

- 7.1 The Purchaser shall in respect of any claim against the Warrantor under this Warranty and within 24 hours of the occurrence of the subject matter of the Warranty Claim:
- (a) Complete in full and submit to the Warrantor a Warranty Claim in the form annexed to Schedule 4;
- (b) Provide date stamped or date identifiable photographs evidencing the claim; and
- (c) Make the Equipment or the relevant part of the Equipment available to the Warrantor for inspection within 48 hours of notification of the relevant Warranty Claim.

08. ENTIRE AGREEMENT

- 8.1 This Warranty constitutes the entire agreement between the parties and supersedes and extinguishes all previous promises, assurances, warranties, representations and understandings between them, whether written or oral, relating to its subject matter.
- 8.2 Each party agrees that it shall have no remedies in respect of any statement, representation, assurance or warranty (whether made innocently or negligently) that is not set out in this Warranty. Each party agrees that it shall have no claim for innocent or negligent misrepresentation or negligent misstatement based on any statement in this Warranty.

No variation of this Warranty shall be effective unless it is in writing and signed by the parties (or their authorised representatives).

09. WAIVER

No failure or delay by a party to exercise any right or remedy provided under this Warranty or by law shall constitute a waiver of that or any other right or remedy, nor shall it prevent or restrict the further exercise of that or any other right or remedy. No single or partial exercise of such right or remedy shall prevent or restrict the further exercise of that or any other right or remedy.



10. SEVERANCE

- 10.1 If any provision or part-provision of this Warranty is or becomes invalid, illegal or unenforceable, it shall be deemed deleted, but that shall not affect the validity and enforceability of the rest of this Warranty.
- 10.2 If any provision or part-provision of this Warranty is deemed deleted under clause 10.1 the parties shall negotiate in good faith to agree a replacement provision that, to the greatest extent possible, achieves the intended commercial result of the original provision.

11. THIRD PARTY RIGHTS

11.1 This Warranty does not give rise to any rights under the Contracts (Rights of Third Parties) Act 1999 to enforce any term of this Warranty.

12. GOVERNING LAW

12.1 This Warranty and any dispute or claim (including non-contractual disputes or claims) arising out of or in connection with it or its subject matter or formation shall be governed by and construed in accordance with the law of England and Wales.

13. JURISDICTION

13.1 Each party irrevocably agrees that the courts of England and Wales shall have exclusive jurisdiction to settle any dispute or claim (including non-contractual disputes or claims) arising out of or in connection with this Warranty or its subject matter or formation.

EC DECLARATION OF CONFORMITY

IN ACCORDANCE WITH EN ISO 17050-1:2004

Declaration: As defined by the Machinery Directive 2006/42/EC and subsequent amendments

We, CONQUIP ENGINEERING GROUP, herewith declare that the following indicated equipment meets the fundamental health and safety requirements concerning the EU guideline(s), due to their design and manufacture.

This declaration will be rendered null and void if the machine is changed without our approval.

SIGNED:

DATED: 2024

\$CONQUIP

Garry Critchley, Chief Executive Officer

| PRODUCT CODES | GENERAL DESCRIPTION / DESIGNATION | WORKING LOAD LIMIT |
|------------------|-----------------------------------|-----------------------|
| FA105AA-02000 | Block Grab Forklift Adaptor | 2000kg |

| ITEM | CODE | DESCRIPTION |
|-----------------------------|----------------------|---|
| EC DIRECTIVE/ REGULATION | 2006/42/EC | Directive 2006/42/EC- new machinery directive |
| HARMONISED STANDARDS | BS EN ISO 12100:2010 | Safety of machinery General principles for design Risk assessment and risk reduction |
| OTHER | LOLER 1998 | Lifting Operations and Lifting Equipment Regulations 1998 (LOLER) |
| REGULATIONS | PUWER 1998 | Provision and Use of Work Equipment Regulations 1998 (PUWER) |

TALKING TO US IS EASY **WE'RE HERE TO HELP**

Call us on (02) 8844 4590 Email us at sales@conquipgroup.com.au www.cqegroup.com/au







