


USER GUIDE

COMPACT CHAIN STORAGE RACK



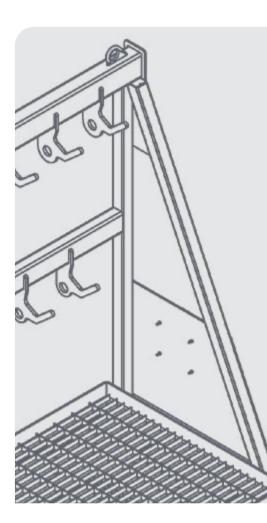

DISCLAIMER

Do not attempt to handle or operate this equipment before you have received sufficient training. Before use, operatives must have carried out all checks featured on the Visual Inspection Sheet on page 11. It is imperative that you have read the General Safety Instructions on page 12 and sufficiently familiarised yourself with the Operational Procedures in this document.

Note that this item is compliant only to the standards specified in this User Guide and it is therefore the duty of the responsible person(s) to review and ensure compliance.

CONTENTS

PRODUCT INFORMATION INTRODUCTION 05 SPECIFICATION **OPERATIONAL PROCEDURES** IMPORTANT USAGE NOTES 08 80 LIFTING THE RACK WITH A CRANE LIFTING THE RACK WITH A FORKLIFT 09 LIFTING THE TOOLBOX WITH A FORKLIFT 09 **MAINTENANCE & INSPECTION** MAINTENANCE REGIME 10 VISUAL INSPECTION SHEET 11 **GENERAL SAFETY INSTRUCTIONS** SAFETY INSTRUCTIONS 12 **GENERAL NOTES** 13 LEGAL TERMS AND CONDITIONS 14 EC DECLARATION OF CONFORMITY 18 STANDARDS AND REGULATIONS APPLICABLE 19

INTRODUCTION

OVERVIEW

The Conquip Compact Chain Storage Rack is a metal rack used as a central location to store chains and other small lifting equipment to keep it clean and organised.

The flat-back design provides stability and saves space as the unit can be positioned up against a wall or a flat surface, away from busy site areas.

Several robust hooks provide suitable storage for chains and slings and the raked-back sides ensure they are easy to access when required. Single and double row racking options accommodate varying site requirements, with the double row providing additional storage for smaller chains and shackles.

A removable and lockable toolbox provides secure storage for smaller lifting accessories. Both the toolbox and the rack feature four-way fork pockets for easy access and manouevre around site.

KEY BENEFITS

- Keeps chains off the ground, preventing weather deterioration.
- Chains and slings are easy to find and organised, rather than tangled together in stillages, reducing downtime.
- Single and double row options for varying site requirements.
- Optional lockable toolbox for safe storage of smaller lifting equipment and accessories.
- Storage box for chain certificates.
- Four-way fork pockets for quick and easy manouevre around site with forklifts or telehandlers.
- Ideal for sites with limited available space.



SPECIFICATION

THE RANGE




CODE	TYPE	HOOKS	WEIGHT (kg)	WLL¹ (kg)
ST111AT-01000	Single Row Rack	6	284	600 UDL ²
ST111AU-01000	Double Row Rack	11	310	1100 UDL²
ST104-00442	Toolbox	N/A	80	N/A

¹Working Load Limit | ²Uniformly Distributed Load

SPECIFICATION

ITEM	PRODUCT CODE
Single Row Rack	ST111AT-01000
Double Row Rack	ST111AU-01000

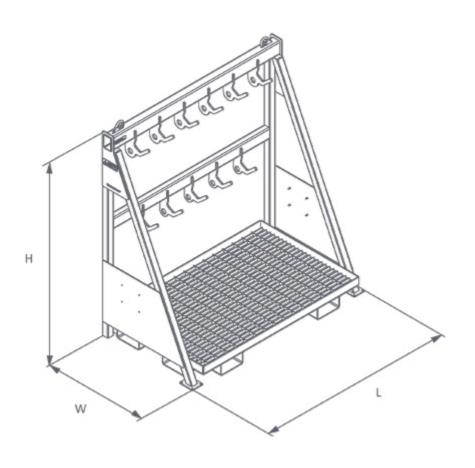



LENGTH (mm)	WIDTH (mm)	HEIGHT (mm)	HOOK WLL*	MESH FLOOR WLL*
1820	1025	1900	100	500
1820	1025	1900	100	500

*Working Load Limit

SPECIFICATION

ITEM	PRODUCT CODE
Toolbox	ST104-00442

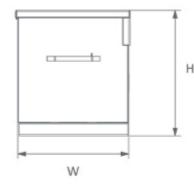

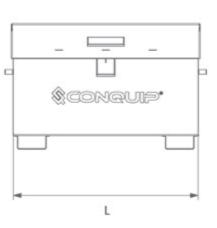

LENGTH	WIDTH	HEIGHT
(mm)	(mm)	(mm)
1210	620	630

OPERATIONAL PROCEDURES

IMPORTANT USAGE NOTES

- Each hook on the Compact Chain Storage Rack has a maximum load limit of 100kg. Do not exceed this Working Load Limit.
- The maximum Working Load Limit of the Single Row version is 600kg UDL (Uniformly Distributed Load) and 1100kg UDL for the Double Row version.
- Conquip recommend always lifting or manoeuvring the Compact Chain Storage Rack and Toolbox separately.
- Be aware that the storage hooks could be at head level when loading with equipment.
- The Compact Chain Storage Rack and the Toolbox must only be lifted when empty.
- Do not overload the Compact Chain Storage Rack.
- Load the overhead hooks with chains and hooks as required.
- Other equipment can be stored in the Toolbox, if supplied, and on the mesh base of the Compact Chain Storage Rack.

LIFTING THE RACK WITH A CRANE

- 01. The Compact Chain Storage Rack must be fully unloaded before lifting with a crane. This includes removing the Toolbox from the mesh floor.
- 02. Attach a suitable two-leg chain sling to the two Compact Chain Storage Rack's lifting points.
- 03. Carefully raise the rack just off the ground and check for balance and security.
- 04. Carefully transport the rack to its required destination, taking care not to jolt.
- 05. When in position, the rack can be lowered onto firm, level ground.
- 06. Detach the rack from the lifting chains

LIFTING THE RACK WITH A FORKLIFT OR TELEHANDLER

- 01. Ensure the Compact Chain Storage Rack is empty before attempting to move it.
- 02. To lift the Compact Chain Storage Rack with a forklift or telehandler, set the machine's forks to the correct width for the Compact Chain Storage Rack's fork pockets. Make sure that they are equidistant from the centre.
- 03. Drive the machine to the Compact Chain Storage Rack, aligning the forks with the fork pockets.
- 04. Move the machine forward until the forks are fully inserted into the fork pockets. The Compact Chain Storage Rack is now ready to lift.
- 05. Carefully raise the rack just off the ground and check for balance and security.
- 06. Carefully transport the rack to its required destination, taking care not to jolt.
- 07. When in position, the rack can be lowered onto firm, level ground.
- 08. Reverse the forklift or telehandler back and clear of the rack.

LIFTING THE TOOLBOX WITH A FORKLIFT OT TELEHANDLER

- 01. Ensure the Toolbox is empty before attempting to move it.
- 02. To lift the Toolbox with a forklift or telehandler, set the machine's forks to the correct width for the Toolbox's fork pockets. Make sure that they are equidistant from the centre.
- 03. Drive the machine to the Toolbox, aligning the forks with the fork pockets.
- 04. Move the machine forward until the forks are fully inserted into the fork pockets. The Toolbox is now ready to lift.
- 05. Before lifting, if the Toolbox is positioned on the floor of the Compact Chain Storage Rack, ensure no chains or lifting equipment stored on the hooks is snagged, as this could tip the Compact Chain Storage Rack.
- 06. Carefully raise the Toolbox just off the ground or surface to check for balance and security.
- 07. Carefully transport the Toolbox to its required destination, taking care not to jolt.
- 08. Lower the Toolbox onto firm, level ground, or the floor of the Compact Chain Storage Rack.
- 09. Reverse the forklift or telehandler clear of the Toolbox, ensuring the rack does not tip.

MAINTENANCE & INSPECTION SCONQUIP MAINTENANCE & INSPECTION

MAINTENANCE & INSPECTION

MAINTENANCE REGIME

- It is mandatory that the equipment is thoroughly examined regularly, by a qualified engineer, to ensure compliance with relevant regulations. Conquip recommend carrying out a thorough examination every six months.
- This equipment may incorporate various loose and detachable items including, but not limited to pins, bolt assemblies and adaption plates. Refer to the separate requirements for the safe use of those items.
- When not being used, store the unit in a clean, upright condition and in a safe place where it will be protected from thieves and unauthorised users.
- This equipment must be inspected by the responsible person before each use and then regularly, as determined by your risk assessment or working practice. If you have any concerns about the machinery's condition or suitability, do not use it.

VISUAL INSPECTION CHECKLIST

INSPECTION ITEMS	RESULTS		COMMENTS
	SATISFACTORY	UNSATISFACTORY	
Serial Number			CQ
Product Code			
Working Load Limit (kg)			
Conforms to user guide specification			
Check the lifting points for damage or wear			
Check the storage hooks for bends or damage			
Check the storage hooks for weld cracks			
Inspect the mesh floor for gouges or excessive wear			
Check the fork pockets for bends or damage			
Check the Toolbox fork pockets for bends or damage			
Check the Toolbox is accessible			
General visual inspection of the body			
SIGNATURE			
Name	Position	Qualification	Signature & Date

GENERAL SAFETY INSTRUCTIONS

The equipment should be properly operated and maintained to keep it in a safe, efficient operating condition. Be sure that all fixings and components are free of mud or other matter that might cause issues hazardous to the operator, serviceman, or other personnel or equipment. Report all malfunctions to those responsible for maintenance, and do not operate the equipment until corrected. Normal service or maintenance performed as required can prevent unexpected and unnecessary downtime.

This operations manual describes general inspections, servicing and operation with the normal safety precautions required for normal servicing and operating conditions. It is not a guide, however, for abnormal conditions or situations, and therefore, servicemen and operators must be safety conscious and alert to recognise potential servicing or operating safety hazards at all times, and take necessary precautions to assure safe servicing and operation of the equipment.



M002
Refer to instructions



M010 Wear protective clothing



M004 Wear eye protection

Wear head protection



M008 Wear safety footwear



M009
Wear protective gloves



M015 Wear high-visibility clothing

GENERAL NOTES

- Read this operations manual and learn the operating characteristics and limitations of the equipment. Know what operating clearances the equipment requires.
- Read and understand all the safety signs prior to operation.
- If the safety signs are obstructed by dirt or debris, clean them using mild soap and water prior to operation.
- If the safety signs are damaged or illegible, replace them immediately, prior to operation.
- Be aware of operating hazards that weather changes can create on the job. Know proper procedures to follow when a severe rain or electrical storm strikes.
- Never attempt to operate or work on machinery when not feeling physically fit.
- Never wear loose clothing, rings, watches, heavy gloves etc., that might catch and result in injury.
- Know what safety equipment is required and use it. Such equipment may be: hard hat, safety glasses, reflector type vests, protective gloves and safety footwear.

TERMS & CONDITIONS

CONQUIP ENGINEERING GROUP STANDARD PRODUCT WARRANTY

01. COMMENCEMENT

- 1.1 This Warranty shall commence on the Commencement Date and shall continue until the earlier of:
- (a) the Expiry Date; or
- (b) the date on which it may be voided in accordance with clause 4.1(b) when it shall terminate automatically without notice.

02. DUTY OF GOOD FAITH

2.1 The Purchaser shall in the exercise of its rights under this Warranty and in the compliance with its obligations under this Warranty be subject to and shall in all respects owe and comply with a duty of good faith to the Warrantor.

03. NATURE AND EXTENT OF COVER

- 3.1 Subject to clause 3.2 the Warrantor agrees and undertakes to the Purchaser that it shall be liable to the Purchaser under and in accordance with the terms of this Warranty in the event that:
- (a) prior to the Expiry Date the Purchaser shall notify a Warranty Claim to the Warrantor; and
- (b) the Equipment or any relevant part of the Equipment shall have become unusable as the result of defective material or defective workmanship prior to the Expiry Date.
- 3.2 The Warrantor's obligation under clause 3.1 shall be expressly subject to the provisions of clauses 4, 5 and 6 and conditional upon the Purchaser's compliance in full with the provisions of clause 7.

04. RESTRICTIONS

- 4.1 The following restrictions apply to this Warranty:
- (a) This Warranty is personal to the Purchaser and neither the legal benefit nor legal burden of this warranty may be assigned or novated or otherwise transferred by the Purchaser to any other party. Any purported assignment, novation or transfer shall not be binding upon the Warrantor.
- (b) This Warranty shall be void in the event that the Purchaser:

- (i) cannot provide authentic and original documentary evidence that the Purchaser has during the period between the Commencement Date and the Expiry Date complied with the Maintenance and Servicing Requirements; and/or
- (ii) has, during the period between the Commencement Date and the Expiry Date, exceeded the Purchaser's Usage Cycle Parameters; and/or
- (iii) has, during the period between the Commencement Date and the Expiry Date, exceeded the Purchaser's Use Parameters; and/or
- (iv) has carried out, or procured the carrying out by any third party of, any repair to the Equipment or any part of the Equipment which is not an Authorised Repair; and/or
- (v) has operated the Equipment after having replaced any part of the Equipment with a part which has not been supplied and fitted by the Warrantor; and/or
- (vi) has modified the Equipment in any way prior to use.

05. EXCLUSIONS

- 5.1 The following are excluded from the scope of this Warranty:
- (a) Loss of and/ or damage to the Equipment or any part of it resulting from any collision between the Equipment and any other fixed or stationary or mobile object whatsoever, irrespective of whether that collision was or was not caused by the Purchaser; and/or
- (b) Loss of and/or damage to any personal property and/or possessions or other equipment not forming part of the Equipment but which is present in or about the Equipment; and/or
- (c) loss and/or damage which is covered by any other insurance policy taken out and maintained by the Purchaser or in respect of which the Purchaser has a contractual obligation to do so; and/or
- (d) loss and/or damage to the equipment which is consistent with the use by the Purchaser of the Equipment:
- (i) in compliance with the Maintenance and Servicing Requirements; and
- (ii) in compliance with the Usage Cycle Parameters; and
- (iii) in compliance with the Use Parameters; and
- (iv) having only carried out Authorised Repairs to the Equipment; and
- (v) having all and any replacement parts fitted by the Warrantor; and
- (vi) in unmodified form.

06. LIMITATION OF LIABILITY

- 6.1 The Warrantor's liability to the Purchaser shall be limited as follows:
- (a) The Warrantor shall not in any circumstances be liable to the Purchaser for indirect and/or consequential and/or economic loss suffered and/or incurred as the case may be by the Purchaser; and
- (b) The Warrantor shall only be liable to the Purchaser for the reasonable and proper costs reasonably and properly incurred by the Purchaser directly in connection with the repair and/ or replacement (at the Warrantor's absolute discretion) of the Equipment or any part of the Equipment; and
- (c) The Warrantor's liability to the Purchaser shall notwithstanding any other provision of this Warranty, not in any circumstances exceed the Purchase Price of the Equipment.

07. WARRANTY CLAIMS

- 7.1 The Purchaser shall in respect of any claim against the Warrantor under this Warranty and within 24 hours of the occurrence of the subject matter of the Warranty Claim:
- (a) Complete in full and submit to the Warrantor a Warranty Claim in the form annexed to Schedule 4;
- (b) Provide date stamped or date identifiable photographs evidencing the claim; and
- (c) Make the Equipment or the relevant part of the Equipment available to the Warrantor for inspection within 48 hours of notification of the relevant Warranty Claim.

08. ENTIRE AGREEMENT

- 8.1 This Warranty constitutes the entire agreement between the parties and supersedes and extinguishes all previous promises, assurances, warranties, representations and understandings between them, whether written or oral, relating to its subject matter.
- 8.2 Each party agrees that it shall have no remedies in respect of any statement, representation, assurance or warranty (whether made innocently or negligently) that is not set out in this Warranty. Each party agrees that it shall have no claim for innocent or negligent misrepresentation or negligent misstatement based on any statement in this Warranty.

No variation of this Warranty shall be effective unless it is in writing and signed by the parties (or their authorised representatives).

09. WAIVER

No failure or delay by a party to exercise any right or remedy provided under this Warranty or by law shall constitute a waiver of that or any other right or remedy, nor shall it prevent or restrict the further exercise of that or any other right or remedy. No single or partial exercise of such right or remedy shall prevent or restrict the further exercise of that or any other right or remedy.

10. SEVERANCE

- 10.1 If any provision or part-provision of this Warranty is or becomes invalid, illegal or unenforceable, it shall be deemed deleted, but that shall not affect the validity and enforceability of the rest of this Warranty.
- 10.2 If any provision or part-provision of this Warranty is deemed deleted under clause 10.1 the parties shall negotiate in good faith to agree a replacement provision that, to the greatest extent possible, achieves the intended commercial result of the original provision.

11. THIRD PARTY RIGHTS

11.1 This Warranty does not give rise to any rights under the Contracts (Rights of Third Parties) Act 1999 to enforce any term of this Warranty.

12. GOVERNING LAW

12.1 This Warranty and any dispute or claim (including non-contractual disputes or claims) arising out of or in connection with it or its subject matter or formation shall be governed by and construed in accordance with the law of England and Wales.

13. JURISDICTION

13.1 Each party irrevocably agrees that the courts of England and Wales shall have exclusive jurisdiction to settle any dispute or claim (including non-contractual disputes or claims) arising out of or in connection with this Warranty or its subject matter or formation.

SCONQUIP

EC DECLARATION OF CONFORMITY

IN ACCORDANCE WITH EN ISO 17050-1:2004

Declaration: As defined by the Machinery Directive 2006/42/EC and subsequent amendments

We, CONQUIP ENGINEERING GROUP, herewith declare that the following indicated equipment meets the fundamental health and safety requirements concerning the EU guideline(s), due to their design and manufacture.

This declaration will be rendered null and void if the machine is changed without our approval.

SIGNED:

DATED: 2025

Garry Critchley, Chief Executive Officer

PRODUCT CODES	GENERAL DESCRIPTION / DESIGNATION	WORKING LOAD LIMIT
ST111AT-01000	Single Row Rack	600kg UDL
ST111AU-01000	Double Row Rack	1100kg UDL
ST104-00442	Toolbox	N/A

ITEM	CODE	DESCRIPTION
EC DIRECTIVE/ REGULATION	2006/42/EC	Directive 2006/42/EC- New machinery directive
HARMONISED STANDARDS	BS EN ISO 12100:2010	Safety of machinery General principles for design Risk assessment and risk reduction
OTHER REGULATIONS	LOLER 1998	Lifting Operations and Lifting Equipment Regulations 1998 (LOLER)
	PUWER 1998	Provision and Use of Work Equipment Regulations 1998 (PUWER)

TALKING TO US IS EASY **WE'RE HERE TO HELP**

Call us on 0333 300 3470 Email us at sales@cqegroup.com www.cqegroup.com







