


USER GUIDE

## **STILLAGE**



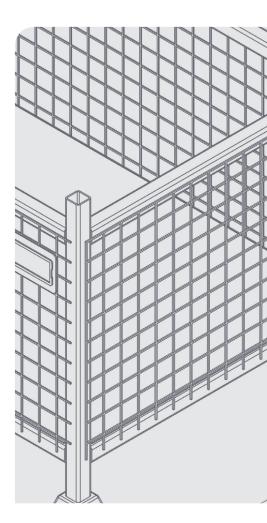

### **DISCLAIMER**

Do not attempt to handle or operate this equipment before you have received sufficient training. Before use, operatives must have carried out all checks featured on the Visual Inspection Sheet on page 11. It is imperative that you have read the General Safety Instructions on page 12 and sufficiently familiarised yourself with the Operational Procedures in this document.

Note that this item is compliant only to the standards specified in this User Guide and it is therefore the duty of the responsible person(s) to review and ensure compliance.

## **CONTENTS**

### PRODUCT INFORMATION

INTRODUCTION

	INTRODUCTION	04
	SPECIFICATION	05
OPE	ERATIONAL PROCEDURES	
	IMPORTANT USAGE NOTES	08
	USAGE INSTRUCTIONS	08
MΑ	INTENANCE & INSPECTION	
	MAINTENANCE REGIME	10
	VISUAL INSPECTION SHEET	11
GEN	NERAL SAFETY INSTRUCTIONS	
	SAFETY INSTRUCTIONS	12
	GENERAL NOTES	13
.EG	AL	
	TERMS AND CONDITIONS	14
	EC DECLARATION OF CONFORMITY	18
	STANDARDS AND REGULATIONS APPLICABLE	19

### **SPECIFICATION**

THE RANGE



CODE	TYPE	WEIGHT (kg)	<b>WLL*</b> (kg)	CAPACITY (litres)
ST101AE-00600	Mesh Sides 600	65	1500	600
ST101AE-00720	Mesh Sides 720	70	1500	720
ST101AE-00900	Mesh Sides 900	85	1500	900
ST101AE-01125	Mesh Sides 1125	95	1500	1125
ST102AE-00600	Solid Sides 600	100	1500	600
ST102AE-00720	Solid Sides 720	110	1500	720
ST102AE-00900	Solid Sides 900	125	1500	900
ST102AE-01125	Solid Sides 1125	140	1500	1125

\*Working Load Limit

### **INTRODUCTION**

### OVERVIEW

The Conquip Stillage is a frame for storage of materials. The stillage is available in a variety of sizes, is suitable for a wide range of material types and sizes, and can be stacked for maximum space utilisation on site.

### KEY BENEFITS

- Solid base and available with either mesh or solid sides for keeping smaller items secure within the frame.
- Stackable design for maximum space utilisation.
- Complete with lifting points for ease of transporting the stillage around site or off a delivery vehicle.
- Working Load Limit of 1500kg.

**\$CONQUIP** 







### **SPECIFICATION**

### STILLAGE - MESH SIDES

ITEM	PRODUCT CODE
Mesh Sides 600	ST101AE-00600
Mesh Sides 720	ST101AE-00720
Mesh Sides 900	ST101AE-00900
Mesh Sides 1125	ST101AE-01125

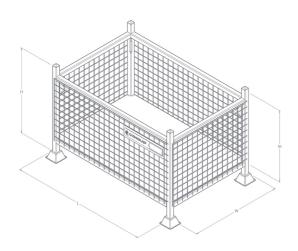

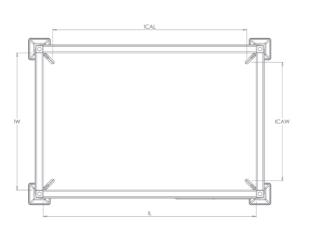



	EXTERNAL		INTERNAL			INTERNAL CLEAR AREA		
CODE	LENGTH (mm)	WIDTH (mm)	HEIGHT (mm)	LENGTH (mm)	WIDTH (mm)	HEIGHT (mm)	LENGTH (mm)	WIDTH (mm)
ST101AE-00600	1000	800	810	920	720	630	800	600
ST101AE-00720	1200	800	810	1120	720	630	1000	600
ST101AE-00900	1500	800	810	1420	720	630	1300	600
ST101AE-01125	1500	1000	810	1420	920	630	1300	600

### **SPECIFICATION**

### STILLAGE - SOLID SIDES

ITEM	PRODUCT CODE
Solid Sides 600	ST102AE-00600
Solid Sides 720	ST102AE-00720
Solid Sides 900	ST102AE-00900
Solid Sides 1125	ST102AE-01125

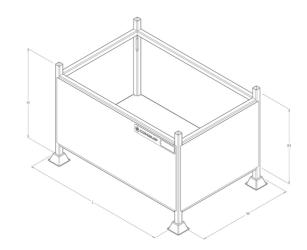

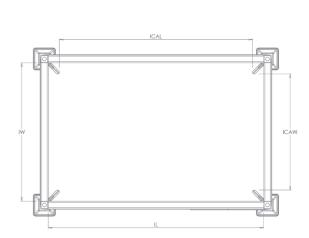

	EXTERNAL		INTERNAL			INTERNAL CLEAR AREA		
CODE	LENGTH (mm)	WIDTH (mm)	HEIGHT (mm)	LENGTH (mm)	WIDTH (mm)	HEIGHT (mm)	LENGTH (mm)	WIDTH (mm)
ST102AE-00600	1000	800	810	920	720	630	800	600
ST102AE-00720	1200	800	810	1120	720	630	1000	600
ST102AE-00900	1500	800	810	1420	720	630	1300	600
ST102AE-01125	1500	1000	810	1420	920	630	1300	600

OPERATIONAL PROCEDURES **©CONQUIP ©CONQUIP**® OPERATIONAL PROCEDURES


### **OPERATIONAL PROCEDURES**

### IMPORTANT USAGE NOTES

- Ensure that the ground is flat and free from obstacles, services or machinery before transporting the Stillage to its required position.
- The Stillage should not be lifted by any means other than the four lifting points.
- Do not allow personnel near the Stillage if you are using heavy machinery to load or unload from the Stillage.

### **USAGE INSTRUCTIONS**

- 01. Attach a suitably rated four-leg lifting chain to the crane or other suitable lifting apparatus.
- 02. Attach the chain to the four lifting points of the Stillage. Always ensure the hook's gate is correctly closed.
- 03. Carefully raise the Stillage off the ground. Do not allow hands or feet to come between the Stillage and the ground.
- 04. Carefully transport the Stillage to its required storage position on site.
- 05. When in position, lower to the ground and detach from the lifting chain and lifting apparatus.
- 06. Load the Stillage with materials, as required. Stillages can be crane-lifted up to a working load limit of 1500kg.
- 07. Ensure the height, width and length of the material stay within the height of the Stillage, especially if the Stillages are to be stacked.
- 08. Stillages can be stacked on top of each other, using a crane or other suitable lifting apparatus to manoeuvre them.



### **MAINTENANCE & INSPECTION**

### MAINTENANCE REGIME

- It is mandatory that the equipment is thoroughly examined regularly, by a qualified engineer, to ensure compliance with relevant regulations. Conquip recommend carrying out a thorough examination every six months.
- This equipment may incorporate various loose and detachable items including, but not limited to pins, bolt assemblies and adaption plates. Refer to the separate requirements for the safe use of those items.
- When not being used, store the unit in a clean, upright condition and in a safe place where it will be protected from thieves and unauthorised users.
- This equipment must be inspected by the responsible person before each use and then regularly, as determined by your risk assessment or working practice. If you have any concerns about the equipment's condition or suitability, do not use it.

### VISUAL INSPECTION CHECKLIST

INSPECTION ITEMS	RESULTS		COMMENTS	
	SATISFACTORY	UNSATISFACTORY		
Serial Number			CQ	
Product Code				
Working Load Limit (kg)				
Conforms to user guide specification				
Lift points bent or worn?				
Fork pockets condition				
Stacking feet condition				
Inspect framework for damage				
General visual inspection of the body				
SIGNATURE				
Name	Position	Qualification	Signature & Date	

**©CONQUIP** 



# **GENERAL SAFETY INSTRUCTIONS**

The equipment should be properly operated and maintained to keep it in a safe, efficient operating condition. Be sure that all fixings and components are free of mud or other matter that might cause issues hazardous to the operator, serviceman, or other personnel or equipment. Report all malfunctions to those responsible for maintenance, and do not operate the equipment until corrected. Normal service or maintenance performed as required can prevent unexpected and unnecessary downtime.

This operations manual describes general inspections, servicing and operation with the normal safety precautions required for normal servicing and operating conditions. It is not a guide, however, for abnormal conditions or situations, and therefore, servicemen and operators must be safety conscious and alert to recognise potential servicing or operating safety hazards at all times, and take necessary precautions to assure safe servicing and operation of the machine.



M002
Refer to instructions



M010
Wear protective clothing



M004 Wear eye protection

Wear head protection



M008 Wear safety footwear



M009
Wear protective gloves



M015
Wear high-visibility
clothing



### **GENERAL NOTES**

• Read this operations manual and learn the operating characteristics and limitations of the equipment. Know what operating clearances the machine requires.

GENERAL SAFETY INSTRUCTIONS

- Read and understand all the safety signs prior to operation.
- If the safety signs are obstructed by dirt or debris, clean them using mild soap and water prior to operation.
- If the safety signs are damaged or illegible, replace them immediately, prior to operation.
- Be aware of operating hazards that weather changes can create on the job. Know proper procedures to follow when a severe rain or electrical storm strikes.
- Never attempt to operate or work on equipment when not feeling physically fit.
- Never wear loose clothing, rings, watches, heavy gloves etc., that might catch and result in injury.
- Know what safety equipment is required and use it. Such equipment may be: hard hat, safety glasses, reflector type vests, protective gloves and safety footwear.

**SCONQUID** 

### **TERMS & CONDITIONS**

### CONQUIP ENGINEERING GROUP STANDARD PRODUCT WARRANTY

#### 01. COMMENCEMENT

- 1.1 This Warranty shall commence on the Commencement Date and shall continue until the earlier of:
- (a) the Expiry Date; or
- (b) the date on which it may be voided in accordance with clause 4.1(b) when it shall terminate automatically without notice.

#### 02. DUTY OF GOOD FAITH

2.1 The Purchaser shall in the exercise of its rights under this Warranty and in the compliance with its obligations under this Warranty be subject to and shall in all respects owe and comply with a duty of good faith to the Warrantor.

#### 03. NATURE AND EXTENT OF COVER

- 3.1 Subject to clause 3.2 the Warrantor agrees and undertakes to the Purchaser that it shall be liable to the Purchaser under and in accordance with the terms of this Warranty in the event that:
- (a) prior to the Expiry Date the Purchaser shall notify a Warranty Claim to the Warrantor; and
- (b) the Equipment or any relevant part of the Equipment shall have become unusable as the result of defective material or defective workmanship prior to the Expiry Date.
- 3.2 The Warrantor's obligation under clause 3.1 shall be expressly subject to the provisions of clauses 4, 5 and 6 and conditional upon the Purchaser's compliance in full with the provisions of clause 7.

### 04. RESTRICTIONS

- 4.1 The following restrictions apply to this Warranty:
- (a) This Warranty is personal to the Purchaser and neither the legal benefit nor legal burden of this warranty may be assigned or novated or otherwise transferred by the Purchaser to any other party. Any purported assignment, novation or transfer shall not be binding upon the Warrantor.
- (b) This Warranty shall be void in the event that the Purchaser:

- (i) cannot provide authentic and original documentary evidence that the Purchaser has during the period between the Commencement Date and the Expiry Date complied with the Maintenance and Servicing Requirements; and/or
- (ii) has, during the period between the Commencement Date and the Expiry Date, exceeded the Purchaser's Usage Cycle Parameters; and/or
- (iii) has, during the period between the Commencement Date and the Expiry Date, exceeded the Purchaser's Use Parameters; and/or
- (iv) has carried out, or procured the carrying out by any third party of, any repair to the Equipment or any part of the Equipment which is not an Authorised Repair; and/or
- (v) has operated the Equipment after having replaced any part of the Equipment with a part which has not been supplied and fitted by the Warrantor; and/or
- (vi) has modified the Equipment in any way prior to use.

#### 05. EXCLUSIONS

- 5.1 The following are excluded from the scope of this Warranty:
- (a) Loss of and/ or damage to the Equipment or any part of it resulting from any collision between the Equipment and any other fixed or stationary or mobile object whatsoever, irrespective of whether that collision was or was not caused by the Purchaser; and/or
- (b) Loss of and/or damage to any personal property and/or possessions or other equipment not forming part of the Equipment but which is present in or about the Equipment; and/or
- (c) loss and/or damage which is covered by any other insurance policy taken out and maintained by the Purchaser or in respect of which the Purchaser has a contractual obligation to do so; and/or
- (d) loss and/or damage to the equipment which is consistent with the use by the Purchaser of the Equipment:
- (i) in compliance with the Maintenance and Servicing Requirements; and
- (ii) in compliance with the Usage Cycle Parameters; and
- (iii) in compliance with the Use Parameters; and
- (iv) having only carried out Authorised Repairs to the Equipment; and
- (v) having all and any replacement parts fitted by the Warrantor; and
- (vi) in unmodified form.



#### 06. LIMITATION OF LIABILITY

- 6.1 The Warrantor's liability to the Purchaser shall be limited as follows:
- (a) The Warrantor shall not in any circumstances be liable to the Purchaser for indirect and/or consequential and/or economic loss suffered and/or incurred as the case may be by the Purchaser; and
- (b) The Warrantor shall only be liable to the Purchaser for the reasonable and proper costs reasonably and properly incurred by the Purchaser directly in connection with the repair and/ or replacement (at the Warrantor's absolute discretion) of the Equipment or any part of the Equipment; and
- (c) The Warrantor's liability to the Purchaser shall notwithstanding any other provision of this Warranty, not in any circumstances exceed the Purchase Price of the Equipment.

#### 07. WARRANTY CLAIMS

- 7.1 The Purchaser shall in respect of any claim against the Warrantor under this Warranty and within 24 hours of the occurrence of the subject matter of the Warranty Claim:
- (a) Complete in full and submit to the Warrantor a Warranty Claim in the form annexed to Schedule 4;
- (b) Provide date stamped or date identifiable photographs evidencing the claim; and
- (c) Make the Equipment or the relevant part of the Equipment available to the Warrantor for inspection within 48 hours of notification of the relevant Warranty Claim.

#### 08. ENTIRE AGREEMENT

- 8.1 This Warranty constitutes the entire agreement between the parties and supersedes and extinguishes all previous promises, assurances, warranties, representations and understandings between them, whether written or oral, relating to its subject matter.
- 8.2 Each party agrees that it shall have no remedies in respect of any statement, representation, assurance or warranty (whether made innocently or negligently) that is not set out in this Warranty. Each party agrees that it shall have no claim for innocent or negligent misrepresentation or negligent misstatement based on any statement in this Warranty.

No variation of this Warranty shall be effective unless it is in writing and signed by the parties (or their authorised representatives).

### 09. WAIVER

No failure or delay by a party to exercise any right or remedy provided under this Warranty or by law shall constitute a waiver of that or any other right or remedy, nor shall it prevent or restrict the further exercise of that or any other right or remedy. No single or partial exercise of such right or remedy shall prevent or restrict the further exercise of that or any other right or remedy.



#### 10. SEVERANCE

- 10.1 If any provision or part-provision of this Warranty is or becomes invalid, illegal or unenforceable, it shall be deemed deleted, but that shall not affect the validity and enforceability of the rest of this Warranty.
- 10.2 If any provision or part-provision of this Warranty is deemed deleted under clause 10.1 the parties shall negotiate in good faith to agree a replacement provision that, to the greatest extent possible, achieves the intended commercial result of the original provision.

### 11. THIRD PARTY RIGHTS

11.1 This Warranty does not give rise to any rights under the Contracts (Rights of Third Parties) Act 1999 to enforce any term of this Warranty.

#### 12. GOVERNING LAW

12.1 This Warranty and any dispute or claim (including non-contractual disputes or claims) arising out of or in connection with it or its subject matter or formation shall be governed by and construed in accordance with the law of England and Wales.

### 13. JURISDICTION

13.1 Each party irrevocably agrees that the courts of England and Wales shall have exclusive jurisdiction to settle any dispute or claim (including non-contractual disputes or claims) arising out of or in connection with this Warranty or its subject matter or formation.

# **EC DECLARATION OF CONFORMITY**

### IN ACCORDANCE WITH EN ISO 17050-1:2004

Declaration: As defined by the Equipment Directive 2006/42/EC and subsequent amendments

We, CONQUIP ENGINEERING GROUP, herewith declare that the following indicated equipment meets the fundamental health and safety requirements concerning the EU guideline(s), due to their design and manufacture.

This declaration will be rendered null and void if the machine is changed without our approval.

SIGNED:

**DATED: 2024** 

**\$CONQUIP** 

Garry Critchley, Chief Executive Officer

PRODUCT CODES	GENERAL DESCRIPTION / DESIGNATION	WORKING LOAD LIMIT
ST101AE-00600	Stillage Mesh Sides 600	1500kg
ST101AE-00720	Stillage Mesh Sides 720	1500kg
ST101AE-00900	Stillage Mesh Sides 900	1500kg
ST101AE-01125	Stillage Mesh Sides 1125	1500kg
ST102AE-00600	Stillage Solid Sides 600	1500kg
ST102AE-00720	Stillage Solid Sides 720	1500kg
ST102AE-00900	Stillage Solid Sides 900	1500kg
ST102AE-01125	Stillage Solid Sides 1125	1500kg

ITEM	CODE	DESCRIPTION		
EC DIRECTIVE/ REGULATION	2006/42/EC	Directive 2006/42/EC- new equipment directive		
HARMONISED STANDARDS	BS EN ISO 12100:2010	Safety of equipment General principles for design Risk assessment and risk reduction		
OTHER	LOLER 1998	Lifting Operations and Lifting Equipment Regulations 1998 (LOLER)		
REGULATIONS	PUWER 1998	Provision and Use of Work Equipment Regulations 1998 (PUWER)		

### TALKING TO US IS EASY **WE'RE HERE TO HELP**

Call us on (02) 8844 4590 Email us at sales@conquipgroup.com.au www.cqegroup.com/au







